

## NEC DT300 Handset Add or Change Extension Name

Press Speaker – dial 700 then your extension number.

Enter or change name.

Press Hold to save.

Press Speaker to exit.

Feature key = delete

# = space

