

NEC – Handset Programming

Change Time

Press: Speaker

Dial: 728

Enter: The new time in 24hr format eg for 3:30 enter 15 30 (728 15 30)

Press: Speaker to finish.

