

User Guide Handset Call Forward Immediate



NEC DT410-430-830

CALL FORWARDING All Calls To set Call Forward - Immediate

1. Pick up the handset or press the Speaker key.
2. Dial the Call Forward - Immediate Service Code (default: 741).
3. Dial 1 (Set)
4. Dial 0 & the destination extension or off-premise number. (0 is for an outside line)
5. Pictured
6. Press the Speaker key or hang up.

Note: Your Call Forwarding Programmable Function Key lights.

To cancel Call Forward - Immediate

1. Pick up the handset or press the Speaker key.
2. Dial the Call Forward - Immediate Service Code (default: 741).
3. Dial 0.
4. Press the Speaker key or hang up.
Remember: This will forward your handset only not the main number.

CF-ALL
1:SET 0:CANCEL

3. Dial 1 (Set)

CF-ALL

4. Dial the destination extension or off-premise number.
- 5.

CF-ALL
92142622000